


Installation and Maintenance Instructions Freewheel Type DC

To avoid premature failure of the freewheel or possible machine malfunction, installation of the freewheel should be carried out by suitably qualified personnel and according to the following instructions.

STIEBER will not accept liability in cases of non-compliance with these instructions!

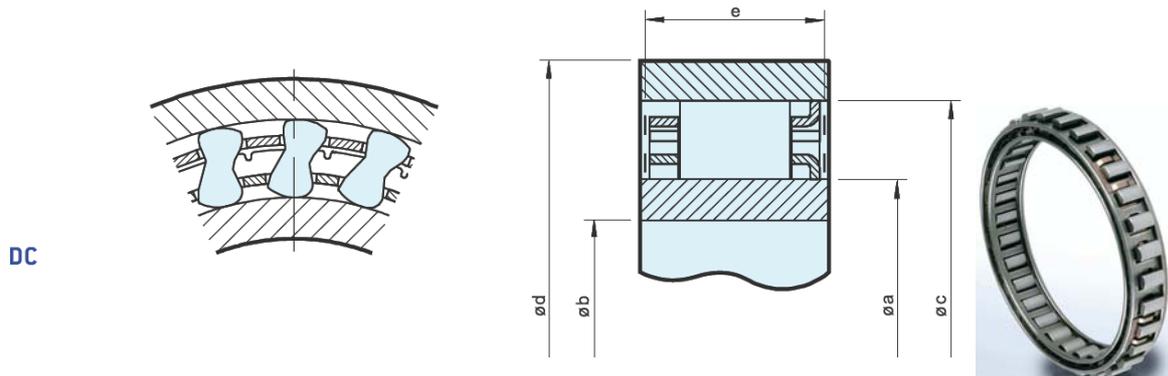

Size	Overrunning speeds			Sprag space		Number of dips	Number of sprags	Weight				
	$T_{KN}^{(1)}$ [Nm]	$n_{max}^{(2)}$ [min ⁻¹]	$n_{amax}^{(3)}$ [min ⁻¹]	$\varnothing a^{+0.008/-0.005}$ [mm]	$\varnothing c^{\pm 0.013}$ [mm]							
DC2222G-N	63	8600	4300	22,225	38,885	8,33 ^{±0.1}	10,0	50	15	—	12	0,030
DC2776-N	119	6900	3400	27,762	44,422	8,33 ^{±0.1}	13,5	58	18	—	14	0,055
DC3034-N	124	6300	3100	30,340	47,000	8,33 ^{±0.1}	13,5	62	20	—	14	0,060
DC3175(3C)-N	159	6000	3000	31,750	48,410	8,33 ^{±0.1}	13,5	63	21	3	16	0,060
DC3809A-N	275	5000	2500	38,092	54,752	8,33 ^{±0.1}	16,0	71	25	—	18	0,085
DC4127(3C)-N	224	4600	2300	41,275	57,935	8,33 ^{±0.1}	13,5	75	27	3	18	0,090
DC4445A-N	363	4300	2100	44,450	61,110	8,33 ^{±0.1}	16,0	79	29	—	20	0,095
DC4972(4C)-N	306	3800	1900	49,721	66,381	8,33 ^{±0.1}	13,5	86	33	4	22	0,100
DC5476A-N	525	3500	1700	54,765	71,425	8,33 ^{±0.1}	16,0	92	36	—	24	0,110
DC5476A(4C)-N	525	3500	1700	54,765	71,425	8,33 ^{±0.1}	16,0	92	36	4	24	0,130
DC5476B(4C)-N	769	3500	1700	54,765	71,425	8,33 ^{±0.1}	21,0	92	36	4	24	0,180
DC5476C(4C)-N	990	3500	1700	54,765	71,425	8,33 ^{±0.1}	25,4	92	36	4	24	0,200
DC5776A-N	604	3300	1600	57,760	74,420	8,33 ^{±0.1}	16,0	98	38	—	26	0,110
DC6334B-N	806	3000	1500	63,340	80,000	8,33 ^{±0.1}	21,0	104	42	—	26	0,175
DC7221(5C)-N	675	2600	1300	72,217	88,877	8,33 ^{±0.1}	13,5	115	48	5	30	0,140
DC7221B-N	1279	2600	1300	72,217	88,877	8,33 ^{±0.1}	21,0	115	48	—	30	0,185
DC7221B(5C)-N	1279	2600	1300	72,217	88,877	8,33 ^{±0.1}	21,0	115	48	5	30	0,210
DC7969C(5C)-N	2038	2400	1200	79,698	96,358	8,33 ^{±0.1}	25,4	124	53	5	34	0,280
DC8334C-N	2055	2300	1100	83,340	100,000	8,33 ^{±0.1}	25,4	132	55	—	34	0,270
DC8729A-N	1250	2200	1100	87,290	103,960	8,33 ^{±0.1}	16,0	134	58	—	34	0,165
DC10323A(5C)*-N	1612	1800	900	103,231**	119,891	8,33 ^{±0.1}	16,0	155	68	5	40	0,205
DC12334C*-N	4800	1500	750	123,340**	140,000	8,33 ^{±0.1}	25,4	184	80	—	50	0,400
DC12388C(11C)	4875	1500	750	123,881	142,880	9,50 ^{±0.1}	25,4	186	80	11	44	0,400

Description:

DC-Freewheels are sprag-type clutch elements with a double cage and individually energised sprags.

The sprags are guided and retained by the inner cage, outer cage and the ribbon spring.

STIEBER GmbH

PO Box 10 53 80

D-69043 Heidelberg, Tel +49 (0)6221 30 47 0, Fax +49 (0)6221 30 47 31

last changes 24.09.2009

They are completed with inner and outer races. The sprag cage assembly moves with the outer race.

The driving speed is restricted, as the sprags centrifugally disengage at high speed. STIEBER can supply outer races secured by bolts, a keyway or a press fit. The inner races can have double, single or no bearing seats if separate bearing support is provided by the customer.

DC units may be used as backstops, overrunning clutches or indexing freewheels with either the inner or outer races overrunning.

Prior to Installation:

With STIEBER supplied races the shaft for the inner race should be to h7 tolerance, the housing for the outer race should be to H7 tolerance.

Ensure that the run-out between the inner and outer races is within the specified limits.

Installation:

The freewheels should be unpacked and installed in a clean dry working environment.

- Push the freewheel element from the races (if supplied by STIEBER) by hand.
- Fit the inner race on to the shaft, and the outer race into the housing.
- Push the freewheel element into the annular gap between inner and outer race, whilst slightly rotating in freewheeling direction.
- Use a circlip or suitable retainer, for axial location. The retainer should act only on the outer cage of the sprag assembly.
- Careful handling of the cage assembly is essential during installation to prevent sprags being dislodged from the cage.
- If a sprag does fall from the cage it can be replaced, with care, by re-insertion from the inside of the assembly. Ensure correct orientation of the sprag (they are asymmetric).
- Do Not use excessive force, the ribbon spring is easily broken.
- Wrongly installed sprags will lead to difficulty in fitting the cage assembly, malfunction, and possible destruction of the freewheel and adjacent components.

After Installation:

After installation ensure smooth rotation in freewheeling direction.

If reversal of freewheeling direction is required, turn the sprag cage assembly through 180°.

Ensure the correct volume and grade of lubricant is present prior to use.

Dismantling:

For dismantling, follow the installation instructions in reverse sequence.

Technical data of DC freewheels

DC-Type	Max. Torque [Nm]	Run-out T.I.R [mm]	Max. overrunning Speed ¹⁾ [rpm]	
			Inner Race	Outer race
DC2222G	125	0,2	8600	4300
DC2776	235	0,2	6900	3400
DC3034	245	0,2	6300	3100
DC3175(3C)	320	0,2	6000	3000
DC3809A	550	0,2	5000	2500
DC4127(3C)	450	0,2	4600	2300
DC4445A	720	0,2	4300	2100
DC4972(4C)	620	0,2	3800	1900
DC5476A	1050	0,2	3500	1700
DC5476A(4C)	1050	0,2	3500	1700
DC5476B(4C)	1550	0,2	3500	1700
DC5476C(4C)	2000	0,2	3500	1700
DC5776A	1200	0,2	3300	1600
DC6334B	1600	0,2	3000	1500
DC7221(5C)	1350	0,2	2600	1300
DC7221B	2550	0,2	2600	1300
DC7221B(5C)	2550	0,2	2600	1300
DC7969C(5C)	4100	0,2	2400	1200
DC8334C	4100	0,2	2300	1100
DC8729A	2500	0,2	2200	1100
DC10323A(3C)	3250	0,2	1800	900
DC12334C4)	9600	0,2	1500	750
DC12388C(11C)	9800	0,2	1500	750

¹⁾ Splash lubrication. For use with grease lubrication the max. overrunning speed has to be reduced to 40%.

Lubrication and Maintenance:

We recommend the lubricants listed in the table below.

When the unit is used as an indexing freewheel, we recommend oils with a kinetic viscosity of about 10mm²/s at the operating temperature are used.

If ambient temperatures below minus 20°C or greater than 100°C are expected, please refer to STIEBER technical department.

Lubricants containing slip additives such as Molykote and Graphite may inhibit operation of the clutch, and are not recommended.

Splash Lubrication

If using splash lubrication, the oil level should be to a depth of 30 to 50% of the inner diameter of the outer race.

- First oil change should be made after about 10 hours operation.
- Further oil changes should be made after every 2000 operating hours. In arduous applications every 1000 operation hours.
- If the clutch is using the oil supply of a gearbox, the instructions for the gear box should apply.

Pressure Lubrication

A 50 to 80% increase in the stated overrunning speed can be achieved using pressure fed lubricant.

We recommend an oil flow of 1 to 3 l/min, depending on freewheel size.

Ideally, the oil flow should be directed through the inner race via 3 equispaced holes in the centre of the sprag path.

Grease Lubrication

With grease lubrication, 30 to 40% of the free space of the freewheel should be grease filled. Excessive grease may lead to malfunction of the clutch.

Recommended Lubricants

	Ambient temperature				Grease
	-40°C to -15°C	-15°C to +15°C	+15°C to +30°C	+30°C to +50°C	
	Operating temperature				
	-20°C to +20°C	+10°C to +50°C	+40°C to +70°C	+50°C to +85°C	
	Oil				
ISO - VG DIN 51519	10	22	46	100	
ARAL	SUMOROL CM10	SUMOROL CM22	MOTANOL HK46	DEGOL CL100T	ARALUB HL2
BP	ENERGOL CS10	ENERGOL CS22	ENERGOL CS46	ENERGOL RC100	ENERGREASE LS2
DEA	ASTRON HL10	ASTRON HL22	ASTRON HL46	ASTRON HL100	GLISSANDO 20
ESSO	NUTO H10 SPINESSO 10	NUTO H22 SPINESSO 22	NUTO H46 TERESSO 46	NUTO H100	BEACON 2
FUCHS	RENOLIN MR3	RENOLIN DTA22	RENOLIN DTA46	RENOLIN MR30	RENOLIT LZR2
KLÜBER	CRUCOLAN 10	CRUCOLAN 22	CRUCOLAN 46	CRUCOLAN 100	POLYLUB WH2
MOBIL	VELOCITE N6	VELOCITE N10	VACTRA MEDIUM VG46	VACTRA HEAVY VG100	MOBILUX 2
SHELL	MORLINA 10	MORLINA 22	MORLINA 46	MORLINA 100	ALVANIA G2
TOTAL	AZZOLA ZS10	AZZOLA ZS22	AZZOLA ZS46	AZZOLA ZS100	MULTIS 2

Alternatively we strongly recommend the use of multigrade oils SAE 10W-40 at working temperature between 0° and +80 ° C.

The ambient temperature is to be taken as a guide line. The operating temperature is determinant for the choice of the viscosity.

Corrosion inhibitor: Rivolta KSP

Time of protection: 6 to 12 months

Recommendation: Prior to use, remove corrosion inhibitor using flushing oil.